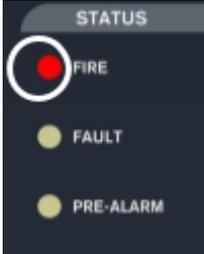
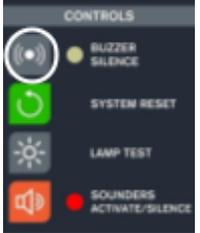


QUICK USER GUIDE

G-One / GEKKO / OCTO+ / CHAMELEON REPEATER / CHAMELEON DISPLAY

FIRE CONDITION	FAULT CONDITION
<p>Indications:</p>  <p>The FIRE LED will be illuminated in the Status section of the control panel.</p> <p>In the Zones section the LED(s) will be illuminated to indicate which zone or zones are in alarm. The control panel LCD display will also provide additional alarm information.</p> <p>The control panel buzzer will sound continuously.</p>  <p>Within the Controls section on the control panel the BUZZER SILENCE and SOUNDERS ACTIVATE/SILENCE LEDs will be illuminated.</p> <p>User Action:</p>  <p>Using the KEYPAD enter the level 1 access code followed by ENTER.</p> <p>Do not press the SYSTEM RESET control button.</p> <p>Press ESC to view the alarm details on the LCD display.</p> <p>After confirming that the fire incident is under control and all occupants within the building have been safely evacuated, press the SOUNDERS ACTIVATE/SILENCE button to cancel the evacuation procedure.</p> <p>If a further FIRE incident is reported press the SOUNDERS ACTIVATE/SILENCE button again to reinstate the evacuation of the building.</p> <p>After recording all the details in the Fire Log Book, the system can be reset by pressing the SYSTEM RESET button.</p> <p>Important: When logged in to access level 1 the SOUNDER ACTIVATE/SILENCE button can be used to manually evacuate the building.</p>	<p>Indications:</p>  <p>When a system fault occurs the control panel LCD will display the fault information.</p> <p>The FAULT LED will be illuminated in the Status section of the control panel.</p> <p>The control panel buzzer will sound periodically every 5 seconds.</p>  <p>The FAULT type will be indicated by a flashing LED in the Faults section of the control panel.</p> <p>User Action:</p>  <p>Using the KEYPAD enter the level 1 access code followed by ENTER.</p> <p>Press BUZZER SILENCE control button.</p> <p>Do not press the SYSTEM RESET control button.</p> <p>Press the ESC button on the keypad to view the fault details on the LCD display.</p> <p>The FAULT LED will remain on. Call your Service provider to inspect, log and rectify the fault. When the problem has been resolved the SYSTEM RESET can be performed.</p> <p>Notes / Contacts</p> <div style="border: 1px solid black; border-radius: 15px; height: 60px; margin: 10px 0;"></div> <p>User Access Code Level 1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 30px; margin: 0 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 30px; margin: 0 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 30px; margin: 0 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 30px; margin: 0 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 30px; margin: 0 5px;"></div> </div>